

# FENCE EXTENSION INSTALLATION GUIDE

UNIVERSAL KIT



**Screenline**  
DEFINE YOUR SPACE

# RECEIVE A GIFT VOUCHER FOR YOUR PHOTO/VIDEO TESTIMONY OF YOUR SCREENLINE FENCE EXTENSION

## HOW TO RECEIVE YOUR GIFT VOUCHER

### PHOTO

RECEIVE A  
**\$20 BUNNINGS  
GIFT VOUCHER!!**



Attach hi-res photos of your fence before and after your extension to an email, taken from roughly the same angle if possible.

Do not embed the photos within the email.  
Do not add any text please.

Write a short testimonial outlining the problem you were experiencing and how our product helped to solve that problem

Please note the photos and testimonial will be used in our marketing, by submitting you are agreeing to this.

OR

### VIDEO

RECEIVE A  
**\$50 BUNNINGS  
GIFT VOUCHER!!**



Record a short testimonial video explaining the issue you had and how Screenline was a solution for you.

Please note the video testimonial will be used in our marketing, by submitting you are agreeing to this.

Write a short testimonial outlining the problem you were experiencing and how our product helped to solve that problem

Please note the photos and testimonial will be used in our marketing, by submitting you are agreeing to this.

## SUBMIT YOUR TESTIMONIAL

Can we use your first name? If not, please give us a name of your choice to use with your submissions.


Include the best email address to send your e-voucher to.

Email your photo/video to [marketing@wallmark.com.au](mailto:marketing@wallmark.com.au)




## WHAT YOU GET IN YOUR KIT (TIMBER)

- 1 1x Extension Panel
- 2 4x Posts
- 1x Pack of Tek Screws

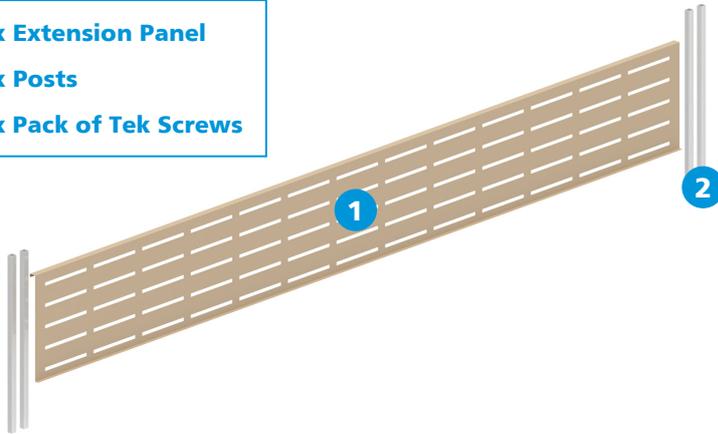

### EXTENSION PANEL HEIGHTS

300 x 2350mm

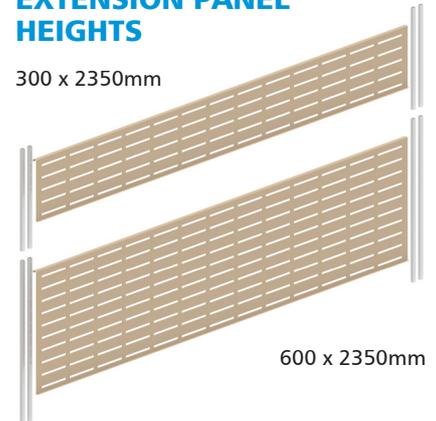


600 x 2350mm

## INSTALLATION STEPS (TIMBER)

1


The posts would be powder coated the same colour as the extension panel

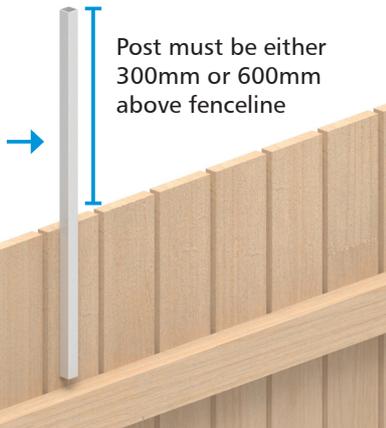

Post must be either 300mm or 600mm above fenceline


Place the post extensions 300mm or 600mm from the top of the post to the top of the rail or the fence depending on which height panel you are using.

2

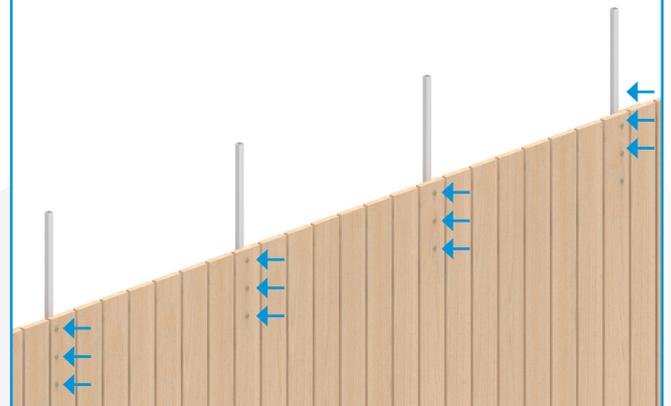


Fasten the posts to the existing fence using the tek screws provided.

3

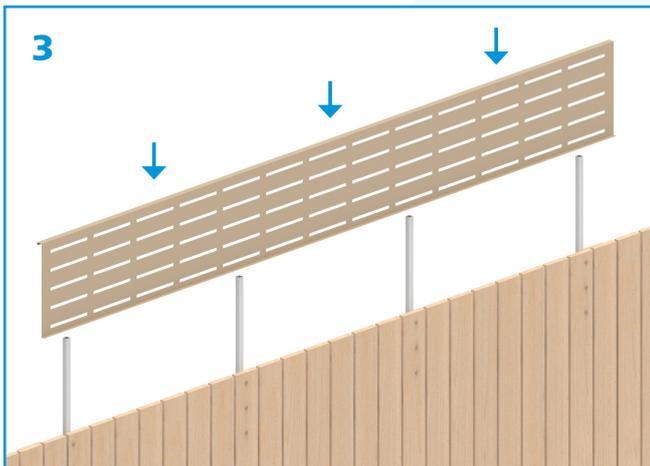

Slide the lattice extension panel over the posts.


4

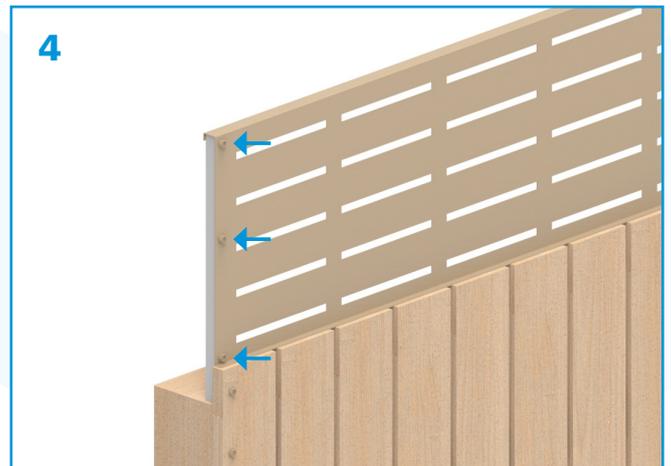

Fix the lattice to the post using the tek screws provided.


# WHAT YOU GET IN YOUR KIT (COLORBOND®)

- 1 1x Extension Panel
- 2 4x Posts
- 1x Pack of Tek Screws

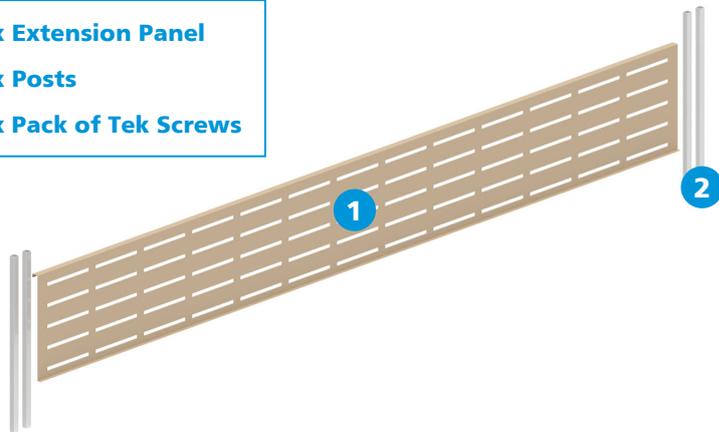


## EXTENSION PANEL HEIGHTS


300 x 2350mm

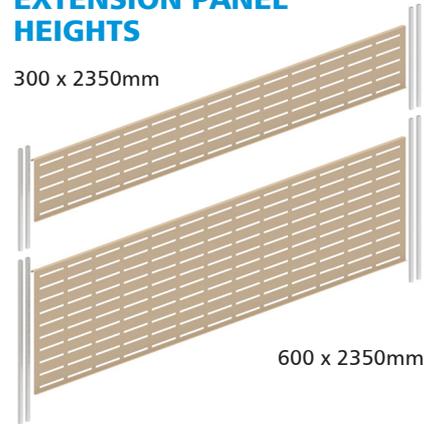


# INSTALLATION STEPS (COLORBOND®)

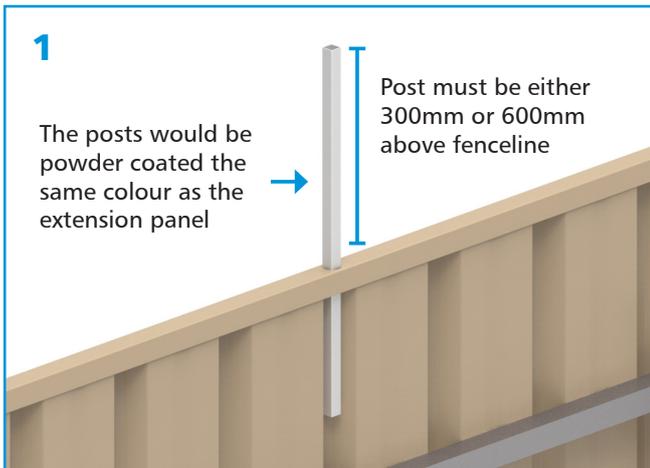


Place the post extensions 300mm or 600mm from the top of the post to the top of the rail or the fence depending on which height panel you are using.

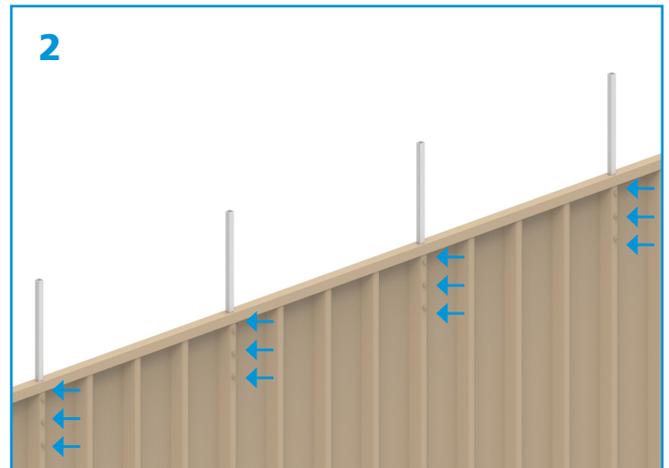

Fasten the posts to the existing fence using the tek screws provided.

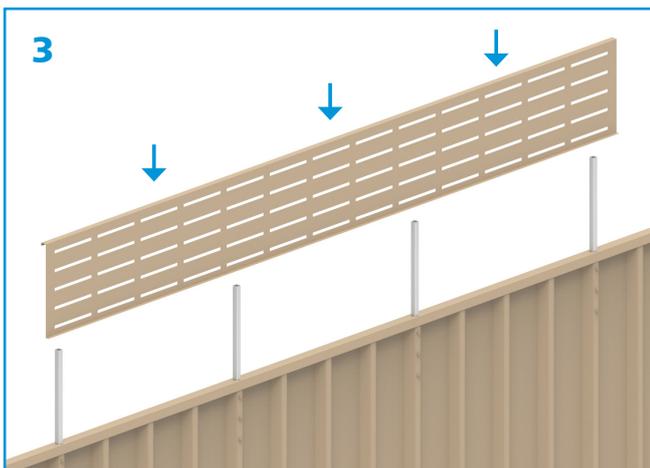


Slide the lattice extension panel over the posts.

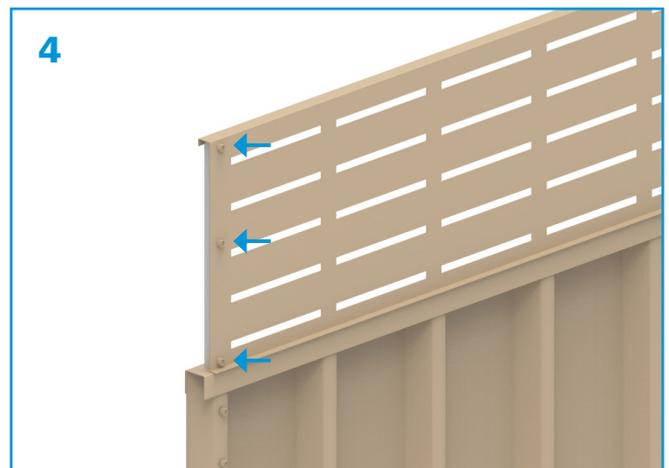

Fix the lattice to the post using the tek screws provided.


## WHAT YOU GET IN YOUR KIT (BRICK)

- 1 1x Extension Panel
- 2 4x Posts
- 1x Pack of Tek Screws

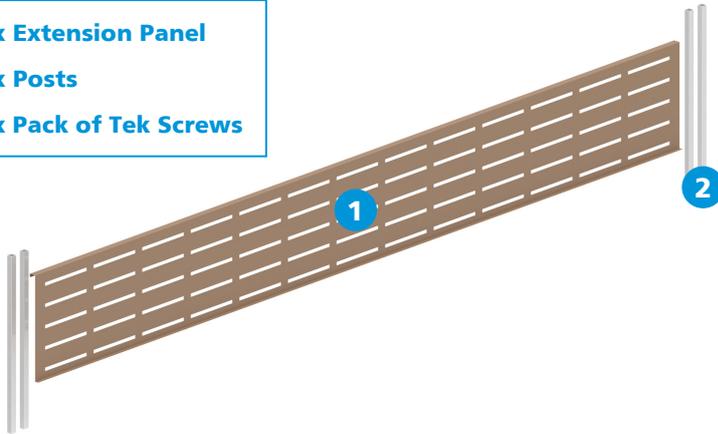


### EXTENSION PANEL HEIGHTS


300 x 2350mm

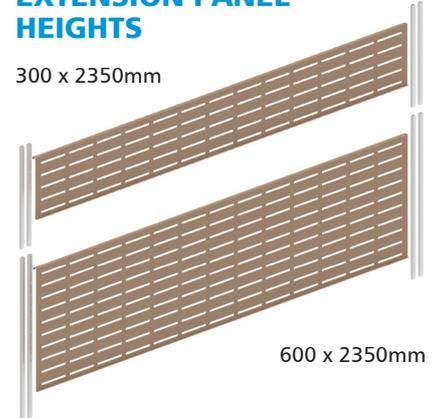


## INSTALLATION STEPS (BRICK)

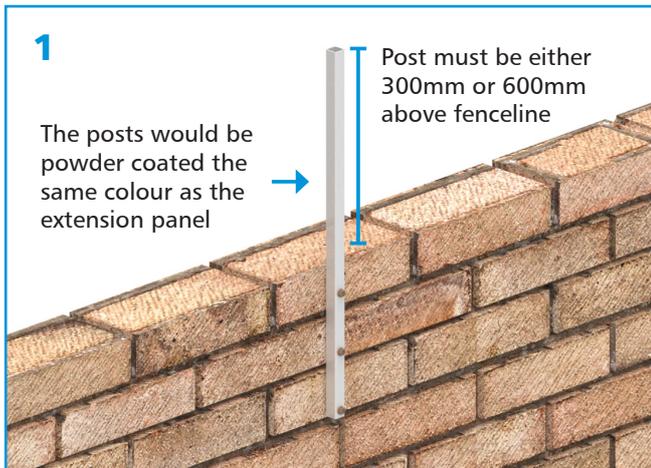


Place the post extensions 300mm or 600mm from the top of the post to the top of the rail or the fence depending on which height panel you are using.

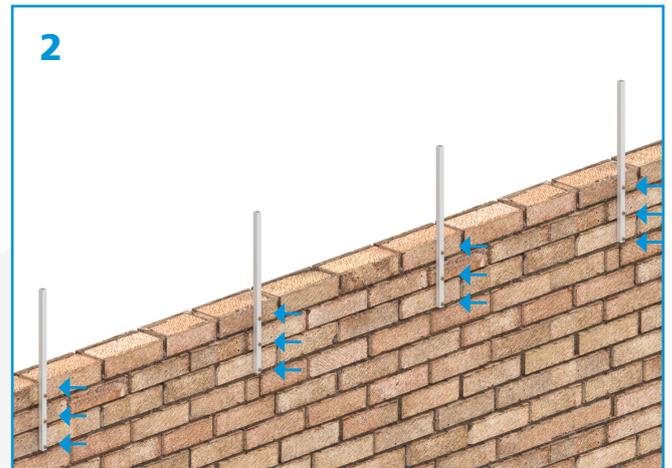

Fasten the posts to the existing fence using the tek screws provided.

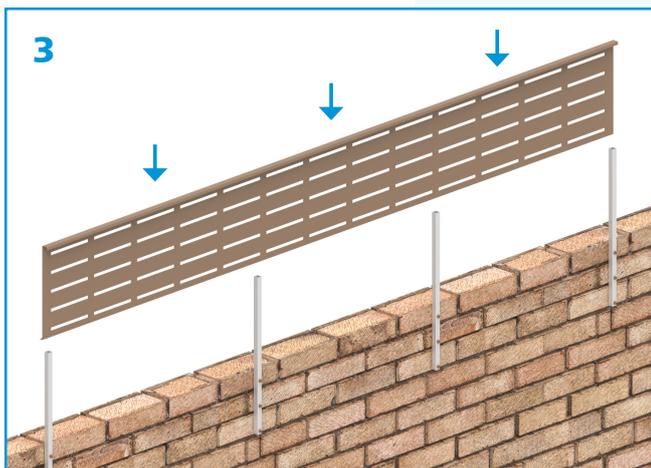


Slide the lattice extension panel over the posts.

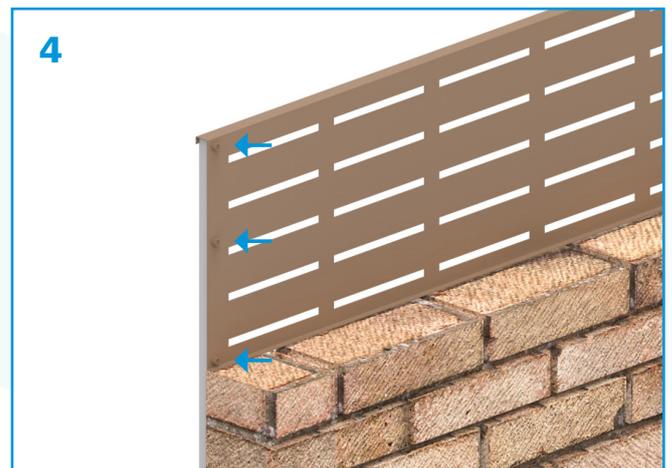

Fix the lattice to the post using the tek screws provided.


# WHAT YOU GET IN YOUR KIT (SUPER 6)

- 1 1x Extension Panel
- 2 4x Posts
- 1x Pack of Tek Screws

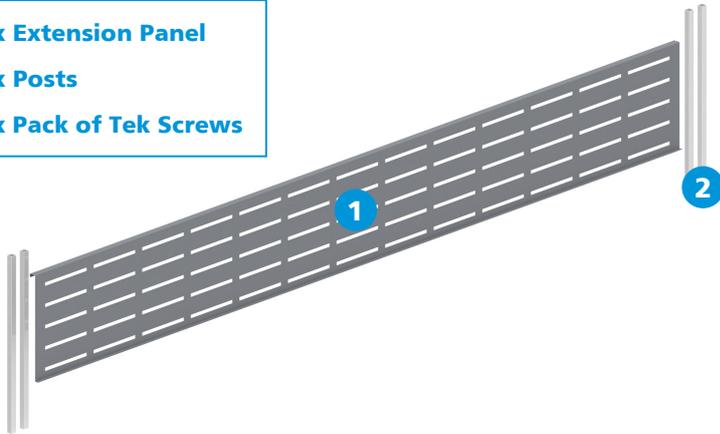


## EXTENSION PANEL HEIGHTS


300 x 2350mm

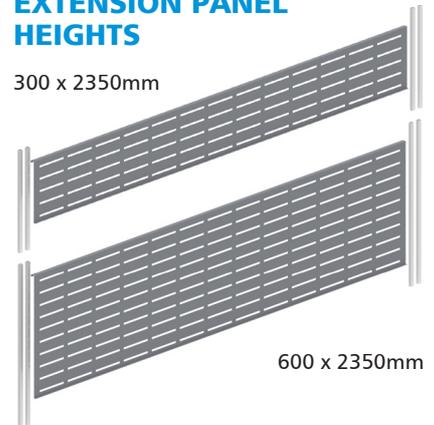


# INSTALLATION STEPS (SUPER 6)

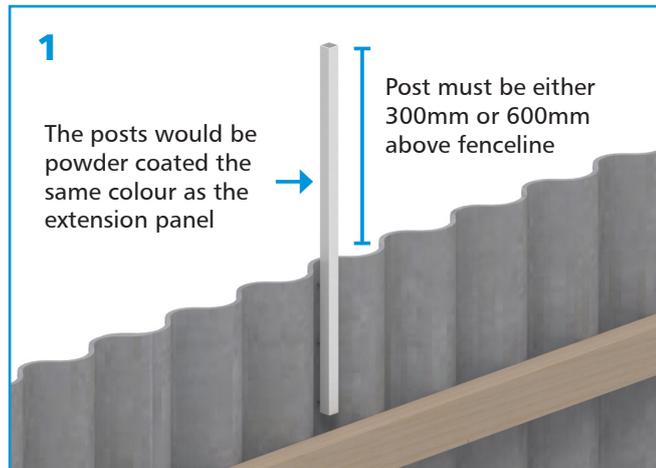


Place the post extensions 300mm or 600mm from the top of the post to the top of the rail or the fence depending on which height panel you are using.

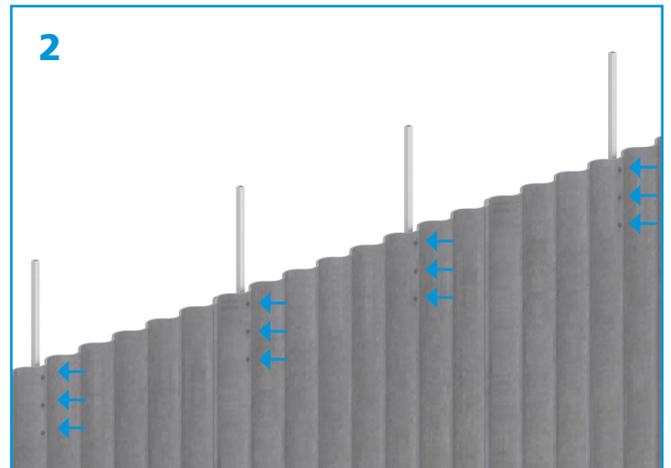

Fasten the posts to the existing fence using the tek screws provided.

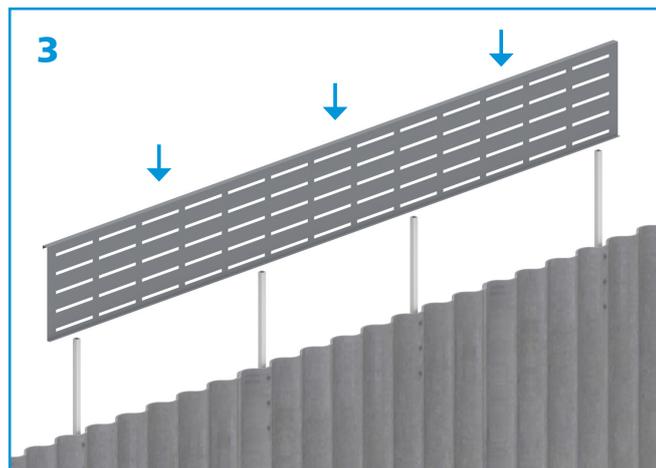

Slide the lattice extension panel over the posts.

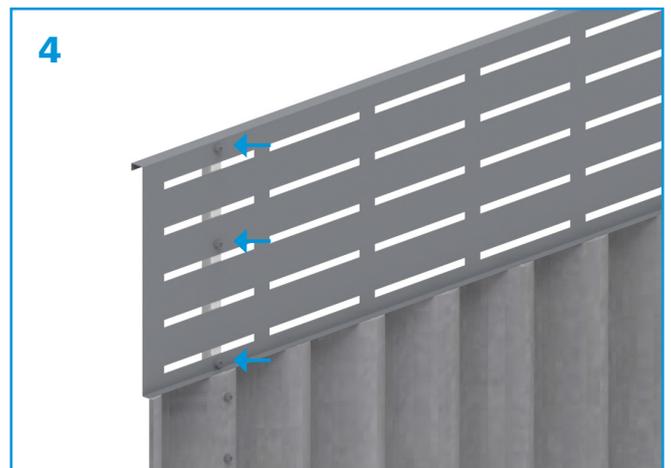

Fix the lattice to the post using the tek screws provided.





**Screenline**  
DEFINE YOUR SPACE

[screenlinefenceextensions.com.au](http://screenlinefenceextensions.com.au)

**1800 001 653**

[sales@screenlinefenceextensions.com.au](mailto:sales@screenlinefenceextensions.com.au)

**Disclaimer**

The material within this booklet is made available for general use and information purposes only. Users should use their own skill and care with respect to the use of material. It is not provided as professional advice. Users should obtain appropriate professional advice relevant to their particular circumstances to evaluate its accuracy, currency, completeness and relevance for their purposes and specific site restraints and topography. No person should place reliance on information from the information booklet. It is the user's sole responsibility to comply with all statutory requirements and make appropriate decisions in relation to such compliance. Whilst every effort has been taken to ensure the accuracy and currency of all information within the information booklet, it is not verified information and the accuracy and currency of the information cannot be guaranteed. The provider of this booklet does not warrant that the information within this information booklet can be relied on and expressly disclaims all warranties, express or implied, and does not warrant or make any representations regarding the use of any information within the information booklet. In some cases the material may incorporate or summarise views, guidelines or recommendations of third parties. The information being general in nature is unable to take into account specific site conditions or additional controls that may apply to a particular site. Note that laws and regulations may vary depending on states and territories and it is your responsibility to check and comply with such law and regulations.